


How to remove a Casement sash




Looking down at hardware, Push down on the hardware arm to release it from the sash track. With a flat screwdriver insert it between the hardware arm and the hardware track. With slight pressure release the hardware arm from the pin.

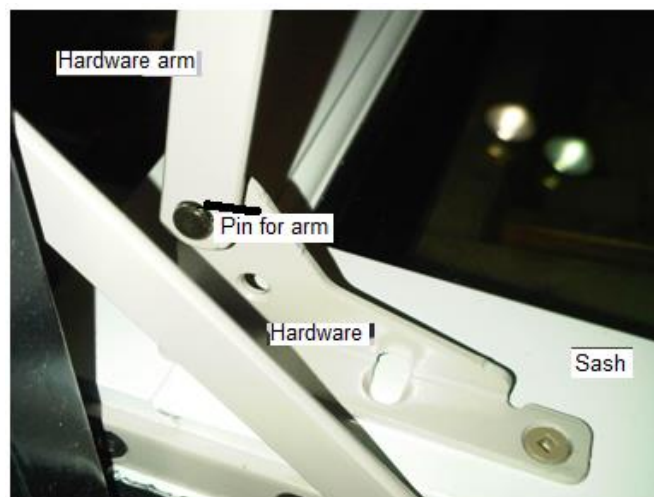

Look up from the bottom at the hardware. With a flat screwdriver insert it between the hardware arm and the hardware. With slight pressure release the hardware arm from the pin.

NORWOOD

NEVER ORDINARY

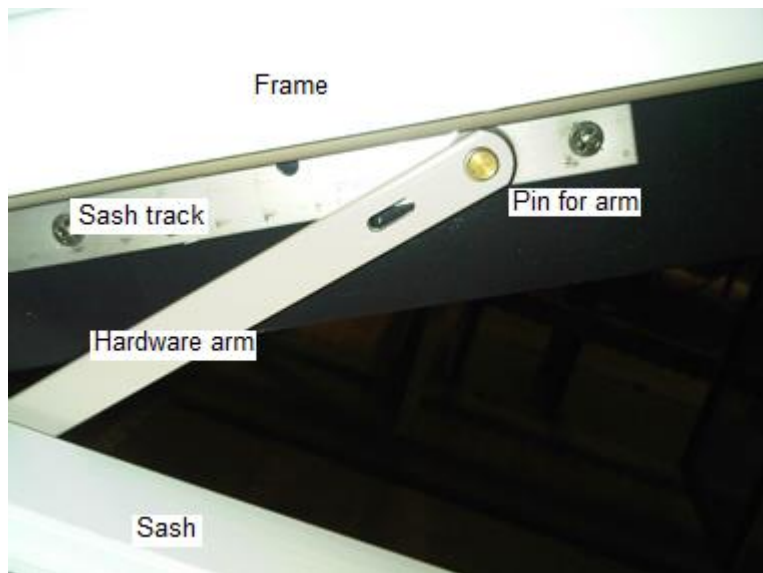

Looking at the top part of the sash. With a flat screwdriver insert it between the hardware arm and the hardware track. With slight pressure release the hardware arm from the pin.

Holding the sash slide it out of the sash out of the tracks.

*****NOTE*****

MAKE SURE THAT YOU HOLD THE SASH BEFORE RELEASING THE HARDWARE ARMS FROM THE PINS,
ONCE RELEASED THE SASH WILL HAVE NOTHING IT IN PLACE AND MAY FALL.

To reinstall the sash repeat above in reverse.