

Rolldown Screen removal for French outswing casement

1. Remove the head cover. (Figure #1)
2. Remove the interior side cover. (Figure #2)
3. Remove the second interior side cover. (Figure #2)
4. The screen cassette should now come out.

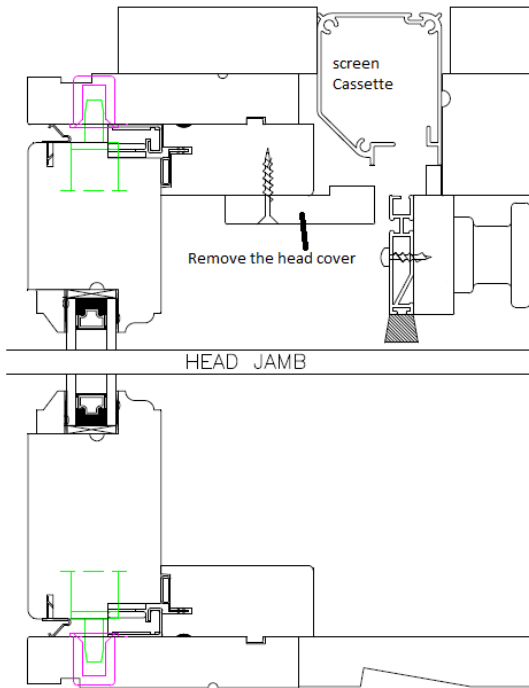


Figure 1 (side profile)

NORWOOD

NEVER ORDINARY

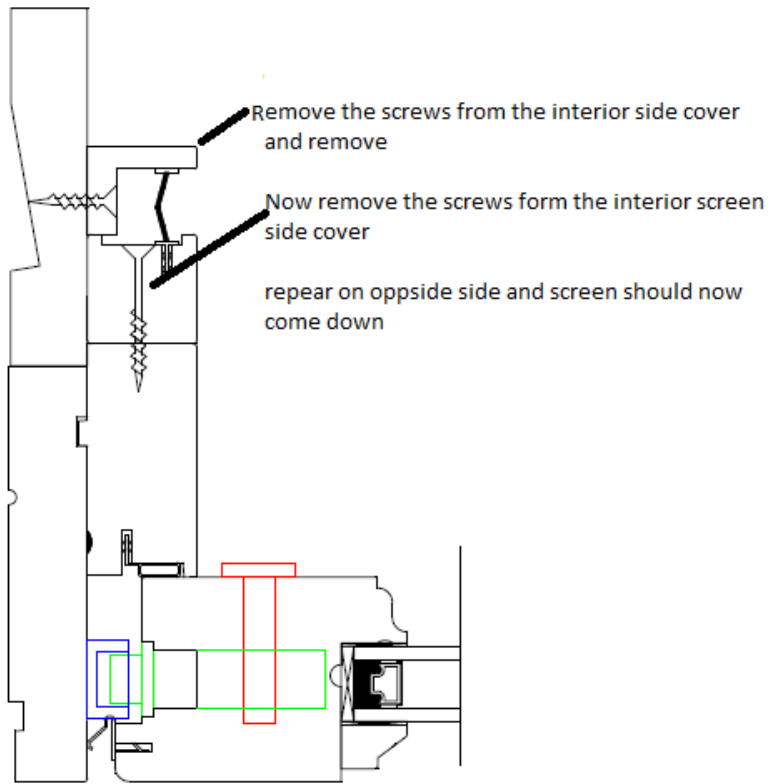


Figure 2 (Top Profile)