


Hung sash replacement

To tilt or remove the sash:

1. Lift the bottom sash up about 5”
2. Pull the two tilt-in-keepers (one on each side of the top rail of the sash) toward the center.
3. Gently pull the sash inward to tilt.

Note:

Do not tilt the sash past a 45° angle unless you want to remove it. To remove the sash tilt the sash down to a 90° angle (this will lock the sash shoes in place)

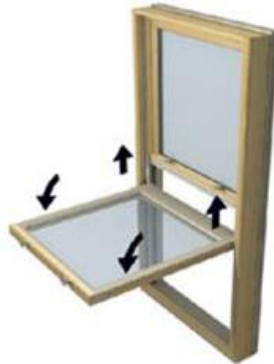

4. Slowly lift one corner up and away from the sash shoe,



5. Then pull the opposite corner out of its sash shoe.
6. To reinstall the sash, reverse the process starting with the top sash.

NOTE: Be very careful because sash can be very heavy