


Limit device installation instructions for casements

This Arm assembly is installed 6 ½" from the inside of the side jamb (after sash is opened) to center of the first screw.

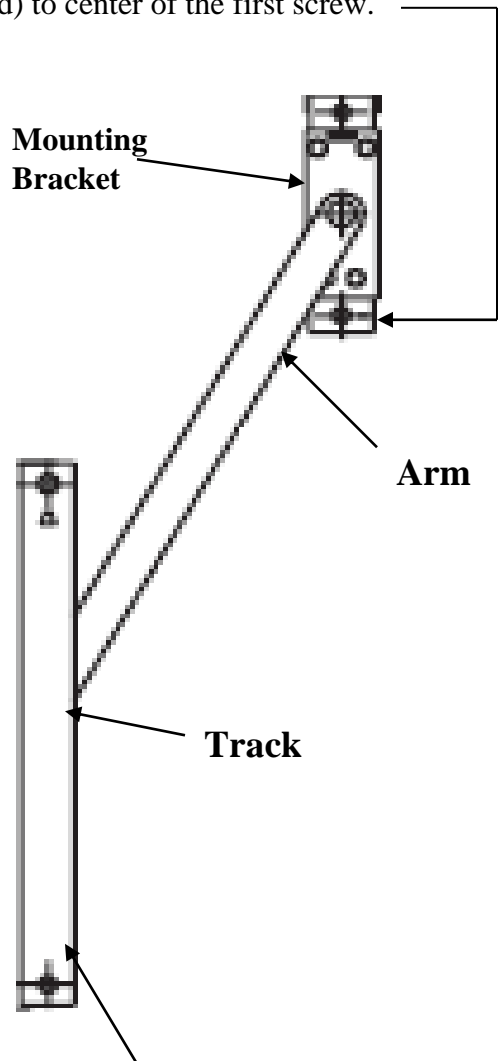

The track is attached to the sash flush with the bottom outside edge.

These Measurements will give you a restricted opening of 4"


These can be installed without removing the sash.

- open the sash to about half way
- hold limit device track flush with the out edge on bottom of sash
- screw in one of the two screws
- disconnect the arm from the mounting bracket
- slide the arm into the track
- screw the other screw in the track

NORWOOD

NEVER ORDINARY

- screw the mounting bracket 6 ½” to the center of the first screw from the inside face of the side jamb. Insure that the mounting bracket tight against the sill liner.
- Connect the arm to the mounting bracket.

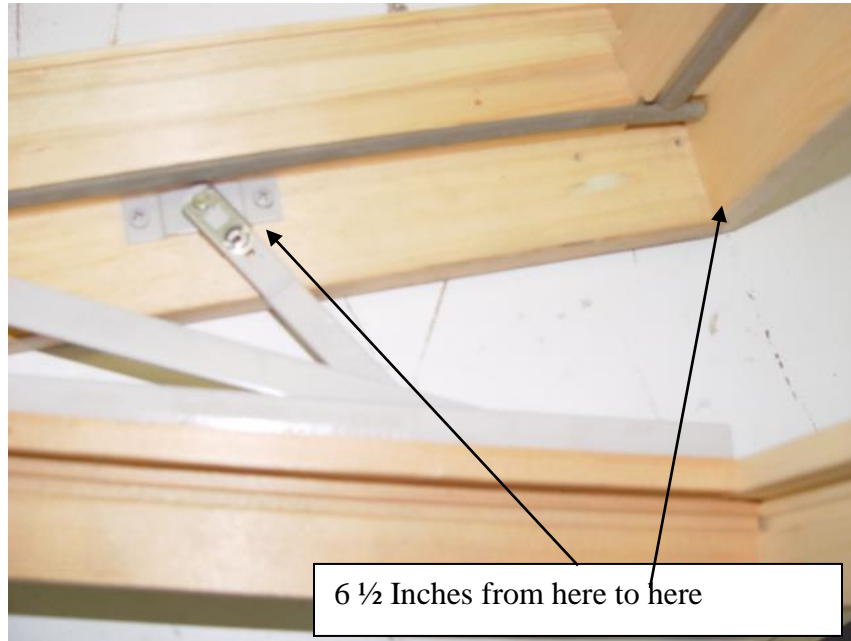

BY NORWOOD WINDOW