



Sealed unit replacement in French door with raised surround

1. Before you remove, please examine the sealed unit carefully to make sure it isn't damaged. Also measure it to make sure it's the right size.
2. Working from the exterior remove the glazing bead around the panel using a long blade utility knife (Figure 1).
3. When the glazing beads are removed, from the inside cut the silicone from around the perimeter of the sealed unit (Figure 1), this can be done by using a long blade utility knife.
4. Push the sealed unit from the interior toward the exterior until it is free and can be removed
5. Clean any old silicone or glazing tape remaining.
6. Using an exterior grade silicone place a 1/8" bead of silicone around the interior glazing of opening (Figure 2).
7. Place the new sealed unit in and center it. Be sure to replace the black rubber spacer from the old sealed unit at the bottom of the new sealed unit, (the rubber spacers may be stuck to the bottom of the old sealed unit).
8. Install the new glazing beads using 1 or 1 1/4" brads or finishing nails. The glazing beads may have to be trimmed.
9. Fill any holes from the brads or nails with wood filler and touch up with paint or stain.



NEVER ORDINARY.

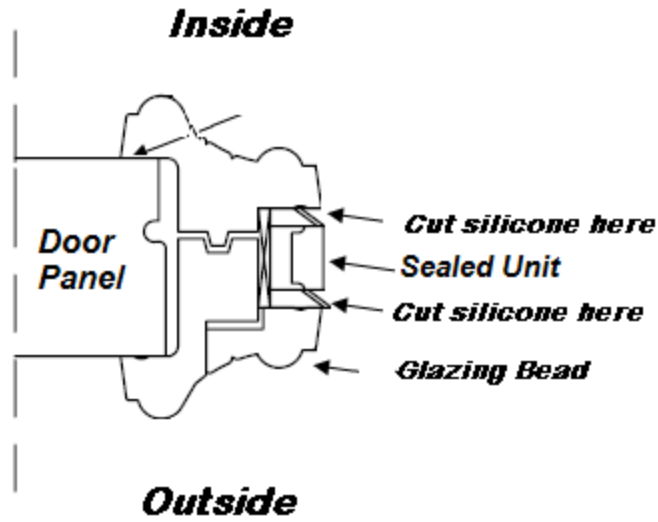


Figure 1

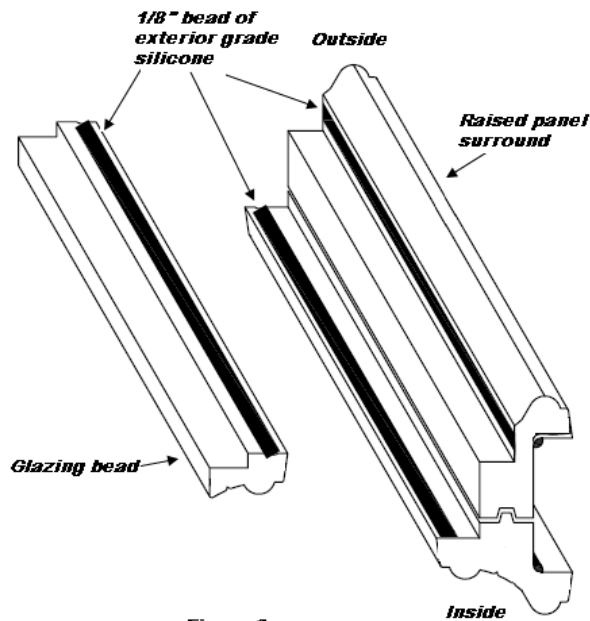


Figure 2