


# NORWOOD

NEVER ORDINARY

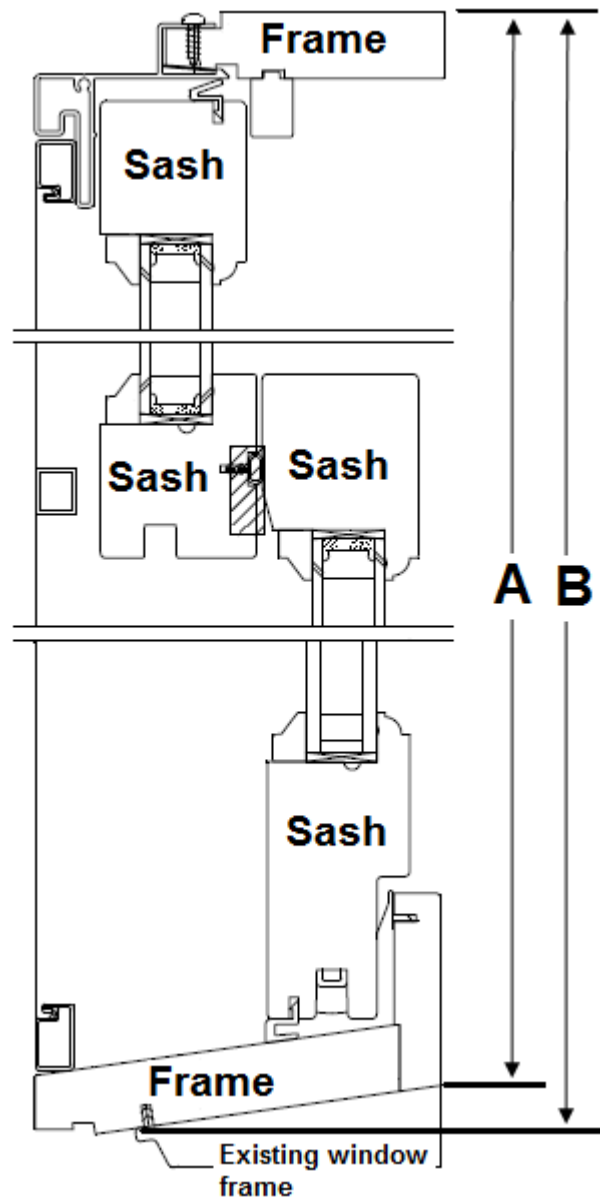


### Find the insert height:

- Remove existing sash and take measurements from the inside side of the existing frame, excluding existing blind stops
- Measure from the head jamb where the top rail of the top sash touches when the sash is closed to the outside edge of the bottom sash where it touches the sill when closed (A). Take the same measurement this time measure the high side of the sill toward the inside (B).
- Be sure to measure both sides of the window frame as well as in the center of the frame. Take the small measurement of the three measurements taken.

# NORWOOD

NEVER ORDINARY

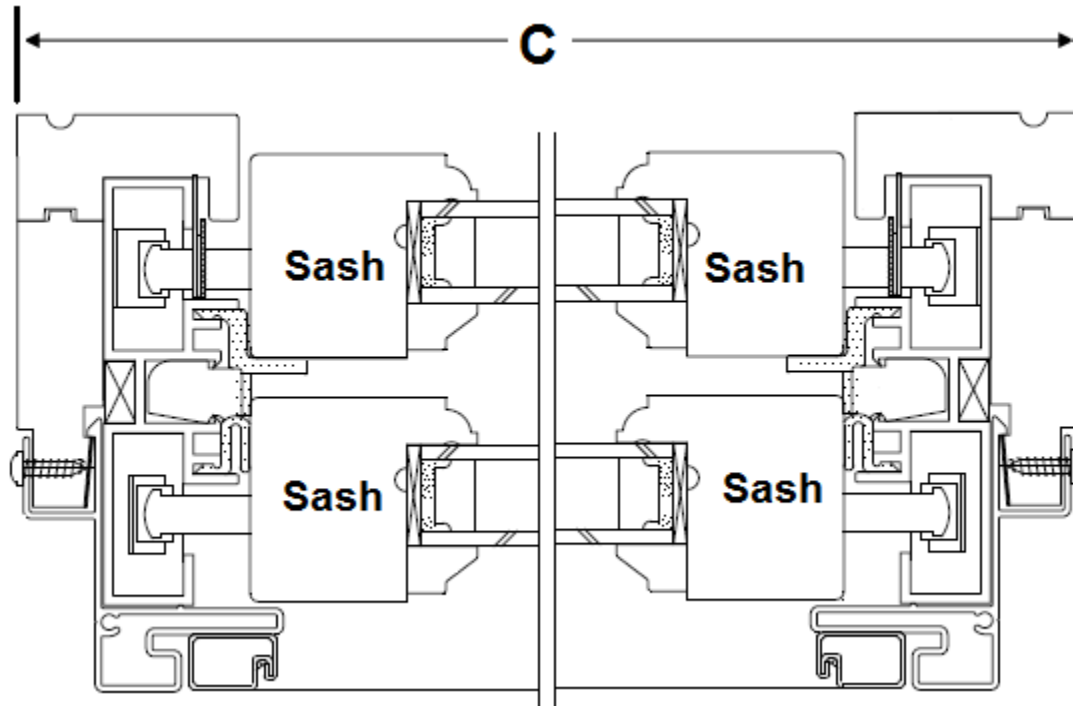

**Find the insert width:**

- Remove existing sash and take measurements from the inside side of the existing frame, excluding existing blind stops.
- Measure the inside distance from jamb to jamb.
- Measure top, bottom and center width and take the small measurement of the three measurements taken.