

**Installing oversized awning with Butt Hinges.**

1. Install window as per installation instruction on back of Norwood window label.
  - The label will be located on the interior surface of the glass on the window.
2. After window is installed secure the hinges into the rough opening header as per figure 1.

**Note: ensure that each hinge is shimmed for adequate support of the sash.**

Screw the screws provided through the hinge and into the framing.

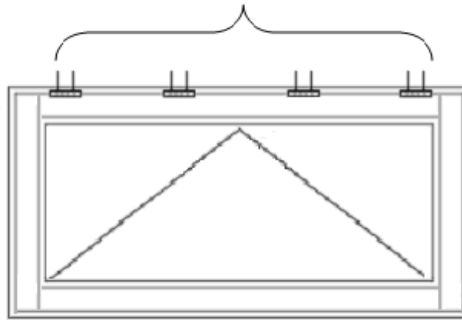


Figure 1.

*Norwood offers NO warranty with oversized windows and doors.*