

Removing sash limiters on a hung window


Removing the custodial tilt latches:

- Remove the screws (4) on the custodial tilt latches located on the either end of top rail on the bottom sash.
- Remove the custodial tilt latches.

Note: at this point there is nothing holding the sash up in place so make sure the sash is secure. From this point this will be a two person job.

Removing the sash:

- Open sash to approximately 5°
- Tilt the sash at a 90Deg angle.

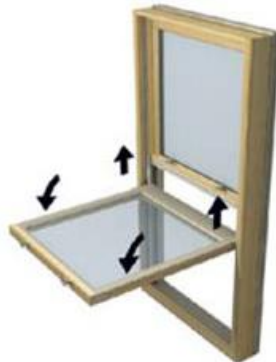

Picture 1

Note: Do not remove the sash from the window.

Removing the limit device:

- Using a screwdriver remove the screw holding the round limit device, that is located in the sash track. Retain limit device in case that need to be reinstalled at a later time.

Reinstalling the sash:

- Tilt the sash up in place and install the custodial tilt latches